

Ручные приводы Chainwheel

Технические характеристики



Архангельск (8182)63-90-72
Астана (7172)727-132
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89
Иваново (4932)77-34-06

Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Липецк (4742)52-20-81
Киргизия (996)312-96-26-47

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Казахстан (772)734-952-31

Пермь (342)205-81-47
Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Таджикистан (992)427-82-92-69

Сургут (3462)77-98-35
Тверь (4822)63-31-35
Томск (3822)98-41-53
Тула (4872)74-02-29
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Ярославль (4852)69-52-93

Единый адрес для всех регионов: bya@nt-rt.ru | www.bray.nt-rt.ru

Installation For 8" & 12" Hand Wheel Chain System

Read through and understand all of the instructions before beginning

Each Kit Contains:

1. **One** 5' long 3/16" dia. galvanized wire rope with a stop sleeve on each end
2. **Four** 3/16" galvanized wire rope clips

1. Dismantle two wire rope clips.
2. Loop wire rope around bracket or neck of valve. **See Figure 1.**
3. Close the loop by applying a wire rope clip. Secure the loop with the second wire rope clip as tightly as possible. See **WARNING Note 5** and **Figures 1 & 2.**
4. Dismantle the two remaining wire rope clips.
5. Loop wire rope around one "arm" of the chain guide. **See Figure 1.**
6. Close the loop by applying a wire rope clip. Secure the loop with the second wire rope clip as tightly as possibly. See **WARNING Note 5** and **Figure 2.**



Figure 1: Wire rope secured around the bracket of valve and one "arm" of the chain guide.

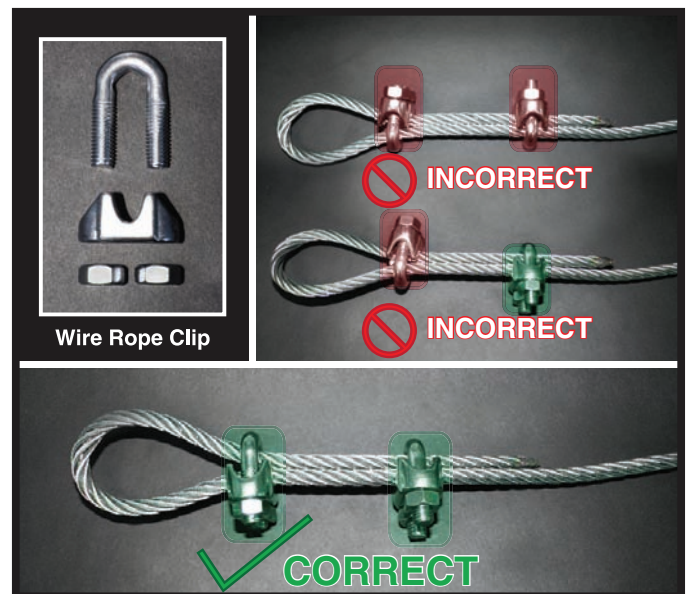


Figure 2: Correct assembly and use of wire rope clips.

Installation For 18" & 24" Hand Wheel Chain System

Read through and understand all of the instructions before beginning

Each Kit Contains:

1. **One** 5' long 1/4" dia. galvanized wire rope with a stop sleeve on one end and a loop at the other end
2. **Two** 1/4" galvanized wire rope clips
3. **One** 3/8"-bolt anchor shackle with cotter pin

1. Dismantle the anchor shackle by removing cotter pin, loosening and removing nut and bolt from the u-shaped body. **See Figure 3.**
2. Install the anchor shackle through the loop on the end of the wire rope and through the hole on top of the chain guide. Secure anchor shackle by fastening the nut and installing the cotter pin. **See WARNING Note 5 and Figures 3.**
3. Dismantle the two wire rope clips.
4. Loop wire rope around bracket or neck of valve. **See Figure 4.**
5. Close the loop by applying a wire rope clip. Secure the loop with the second wire rope clip as tightly as possible. **See WARNING Note 5 and Figures 2 & 4.**

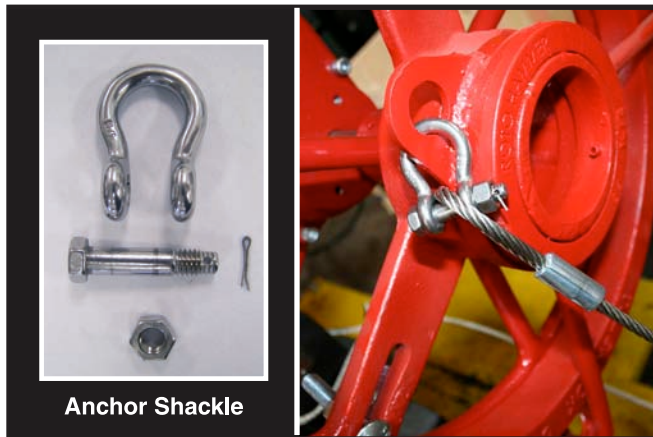


Figure 3: Anchor Shackle connected to the chain guide and Anchor Shackle Assembly.



Figure 4: Wire rope secured around the neck of the valve.

Архангельск (8182)63-90-72
Астана (7172)727-132
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89
Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Липецк (4742)52-20-81
Киргизия (996)312-96-26-47
Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Казахстан (772)734-952-31
Пермь (342)205-81-47
Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Таджикистан (992)427-82-92-69
Сургут (3462)77-98-35
Тверь (4822)63-31-35
Томск (3822)98-41-53
Тула (4872)74-02-29
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Ярославль (4852)69-52-93

Единый адрес для всех регионов: bya@nt-rt.ru | | www.bray.nt-rt.ru